


Refer to Replacement Pre-filter package and Owner's Manual for additional information and safety guidelines. **TURN OFF AIR PURIFIER AND UNPLUG IT FROM THE WALL OUTLET BEFORE SERVICING.**

Pre-filter measurement directions:

1. Unwrap and completely unfold the pre-filter. Place the paper template over the pre-filter and line up with the left hand bottom edge of the pre-filter.
2. Place the HEPA filter on a flat surface. Hold the new pre-filter, including the paper template, up to the HEPA filter so that the bold line on the bottom of the pre-filter template lines up with the bottom of the HEPA filter.
If you are using a Universal HEPA Filter, (model HRF-11 or HRF-14), make sure that the required number of Universal HEPA Filters are assembled prior to attempting to fit the pre-filter.
3. Carefully cut along the perforation on the pre-filter that most closely matches the height of your HEPA filter(s). **DO NOT** cut the pre-filter so that it extends above the height of the HEPA filter(s).

For some smaller units you will have sufficient amount of filter material left over to use as a second pre-filter. If this is the case, wrap extra filter material in plastic and save for the next pre-filter replacement (approximately 3 months, depending upon use).

NOTE: If there is no perforation for your pre-filter, line up new pre-filter to HEPA filter(s) and cut pre-filter to match the height of the HEPA filter(s).

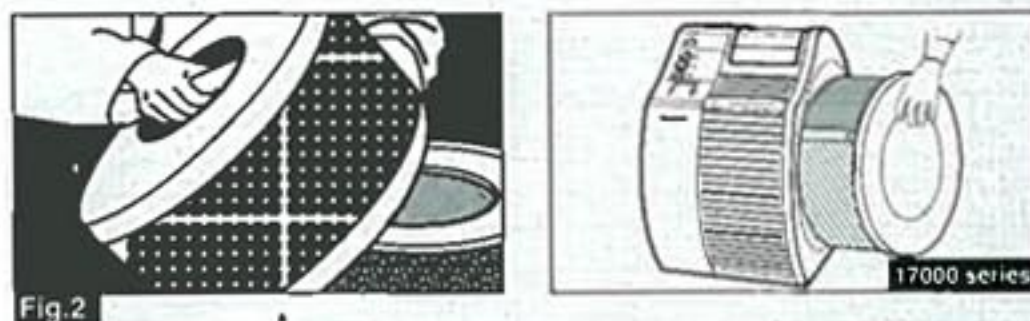

The performance rating of your Honeywell enviraicare® air purifier is based exclusively on use with Honeywell replacement filters.

Visit our web site: www.kaz.com



Any Questions? 1-800-477-0457
Call toll-free to talk to
a technical expert